

Please read instructions carefully prior to assembly. Scan QR code below for more product information.



Included Parts

1




1. Keystone
2. Cable tie
3. Cover (optional)
4. Wire manager

2



3



4




Category 6A Keystone Socket T3R48J-C6AS-ME


Field assembly instructions for installers

T568A

T568B

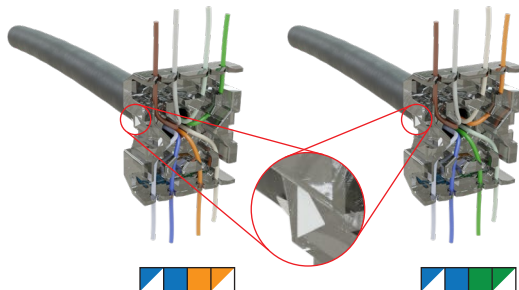


40mm actual size

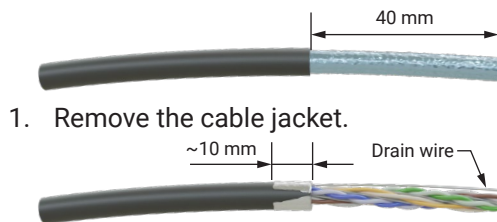

1. Remove the cable jacket.
2. Peel back outer foil and separate the drain wire.


~5 mm

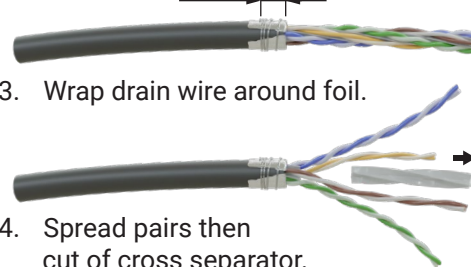


3. Wrap drain wire around foil.
4. Spread pairs then cut of cross separator.

3. Insert wires through wire manager then secure each wire into its respective position.


(T568B shown here)

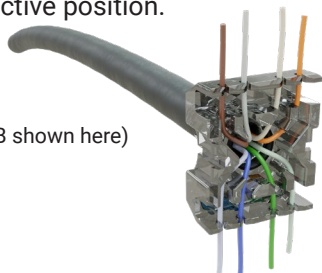


4. Cut off excess wires, taking care to cut flush to the wire manager.

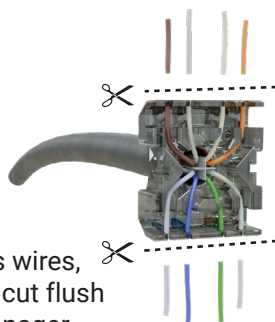


5. Insert wire manager into keystone body, ensuring that the arrow on both are aligned on the same side.

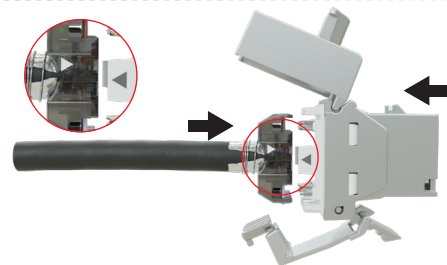

6. Close back cover.

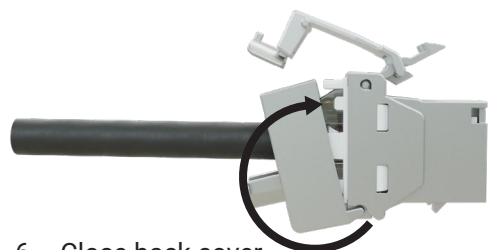

7. Close latch in two steps. Lugs must be in notches as shown above.

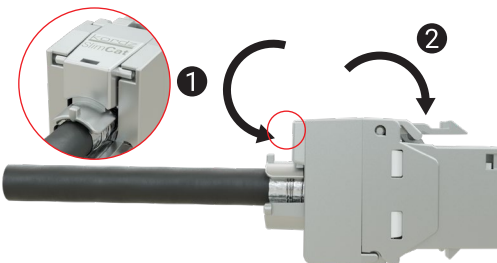

8. Affix cable tie and cut off excess.

